

General Description

SE1084 is a low dropout positive adjustable or fixed-mode regulator with minimum of 5.0A output current capability. The product is specifically designed to provide well-regulated supply for low voltage IC applications such as high-speed bus termination and low current 3.3V logic supply. SE1084 is also well suited for other applications such as VGA cards. SE1084 is guaranteed to have lower than 1.5V dropout at full load current making it ideal to provide well-regulated outputs of 1.25V to 3.3V with 4.8V to 12V input supply.

Features


- 5V maximum dropout at full load current
- Built-in thermal shutdown
- Output current limiting
- Adjustable and 1.5V/1.8V/2.5V/3.3V/5.0V fixed output voltages
- Fast transient response
- Good noise rejection
- Package: TO252, TO263, TO220

Applications


- High Efficiency Linear Regulators
- Battery Chargers
- Post Regulation for Switching Supply
- Microprocessor Supply
- Desktop PCs, RISC and Embedded Processors' Supply

Typical Application

5.0V to 3.3V Fixed Mode Regulator

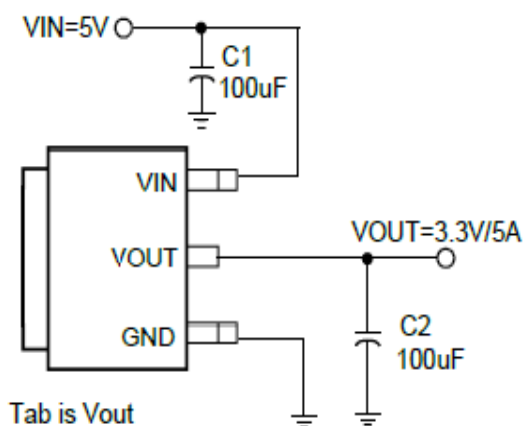


Adjustable Regulator

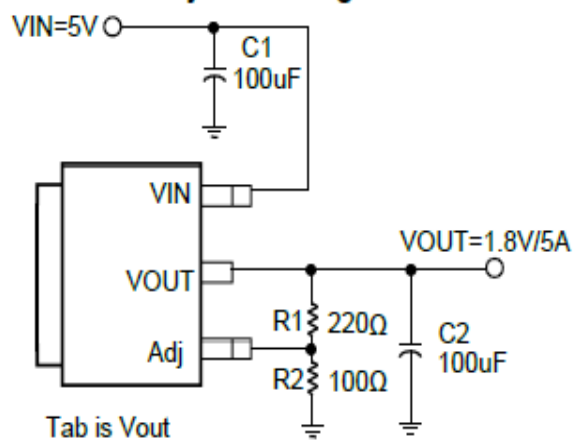

$$V_{OUT} = V_{REF} * \left(1 + \frac{R_2}{R_1}\right)$$

Pin Configuration

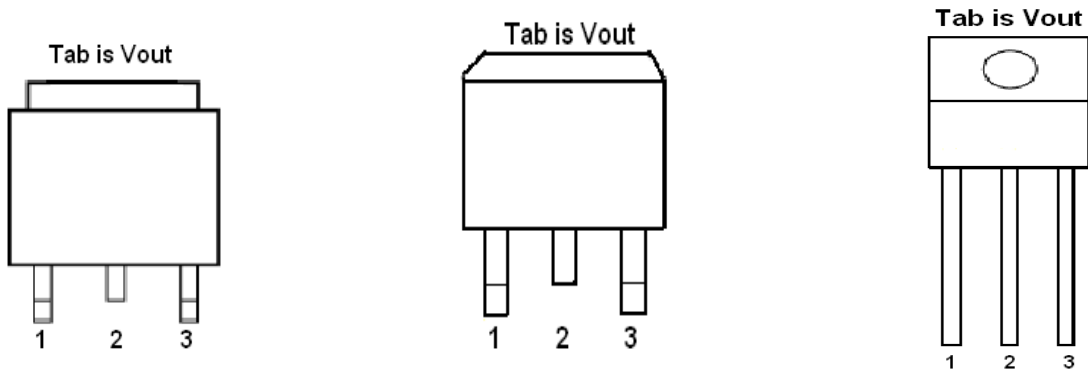


TO252:1 Adj(GND) 2 Vout 3 Vin TO263:1 Adj(GND) 2 Vout 3 Vin TO220:1 Adj(GND) 2 Vout 3 Vin

Pin Description


NO.	Pin Name	Pin Function Description
1	Adj (GND)	Adjustable (Ground only for fixed version) A resistor divider from this pin to the Vout pin and ground sets the output voltage.
2	VOUT	The output of the regulator. A minimum of 100uF (0.15Ω ≤ ESR ≤ 10Ω) capacitor must be connected from this pin to ground to insure stability.
3	VIN	The input pin of regulator. Typically a large storage capacitor (0.15Ω ≤ ESR ≤ 10Ω) is connected from this pin to ground to insure that the input voltage does not sag below the minimum dropout voltage during the load transient response. This pin must always be 1.4V higher than Vout in order for the device to regulate properly.

Functional Block Diagram

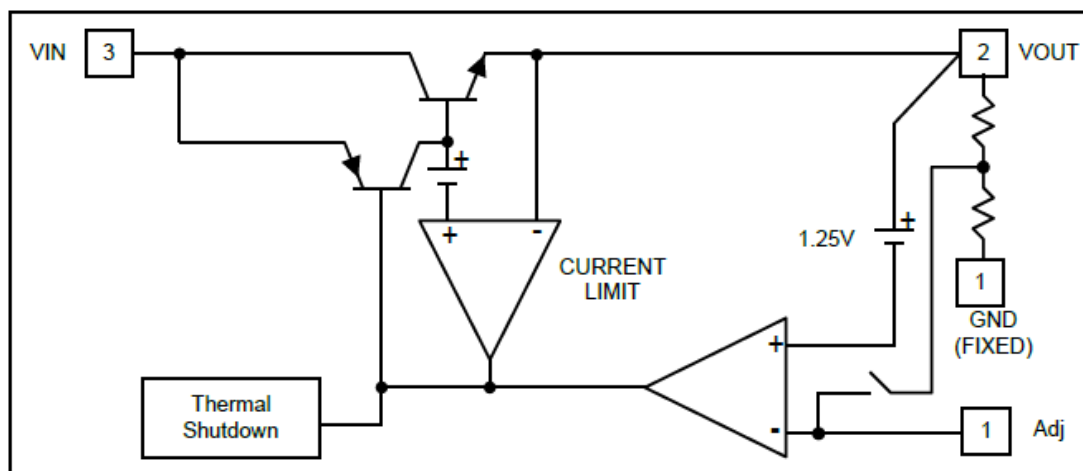



Ordering Information

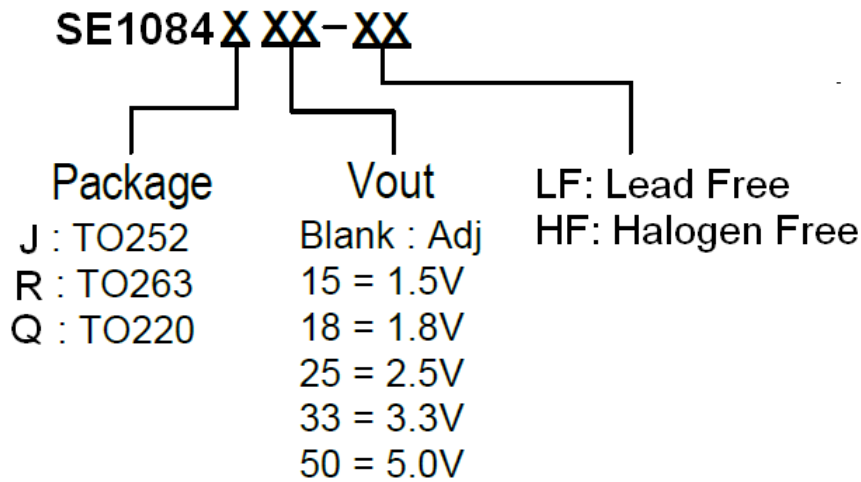

Part Number	Marking Information	Package	Remarks
SE1084J-LF	SE1084J YYWW-LF	TO252	YYWW means Production batch Adjustable output voltage.
SE1084R-LF	SE1084R YYWW-LF	TO263	
SE1084Q-LF	SE1084Q YYWW-LF	TO220	
SE1084JXX-LF	SE1084JXX YYWW-LF	TO252	YYWW means Production batch Fixed output voltages; XX denotes voltage options (1.5V,1.8V, 2.5V,3.3V and 5.0V).
SE1084RXX-LF	SE1084RXX YYWW-LF	TO263	
SE1084QXX-LF	SE1084QXX YYWW-LF	TO220	

Absolute Maximum Ratings

Symbol	Parameter	Maximum	Units
V _{IN}	DC Supply Voltage	-0.3 to 12	V
P _D	Power Dissipation	Internally Limited	
T _{ST}	Storage Temperature	-65 to +150	°C
T _{OPJ}	Operating Junction Temperature Range	-40to +125	°C



Electrical Characteristics

($V_{in} = 3.6V$; $T_j = 25^\circ C$ unless otherwise specified)

Symbol	Characteristics	Test Conditions	Min	Typ	Max	Unit
V_{REF}	Reference Voltage	$I_{OUT} = 10mA, T_J = 25^\circ C,$ $(V_{IN} - V_{OUT}) = 1.5V$	1.225	1.250	1.275	V
V_{OUT}	Output Voltage	$I_{OUT} = 10mA, T_J = 25^\circ C,$ $3V \leq V_{IN} \leq 12V$	1.470	1.500	1.530	V
		$I_{OUT} = 10mA, T_J = 25^\circ C,$ $3.3V \leq V_{IN} \leq 12V$	1.764	1.800	1.836	V
	(Fixed Version)	$I_{OUT} = 10mA, T_J = 25^\circ C,$ $4V \leq V_{IN} \leq 12V$	2.450	2.500	2.550	V
		$I_{OUT} = 10mA, T_J = 25^\circ C,$ $4.8V \leq V_{IN} \leq 12V$	3.235	3.300	3.365	V
		$I_{OUT} = 10mA, T_J = 25^\circ C,$ $6.5V \leq V_{IN} \leq 12V$	4.900	5.000	5.100	V
V_{LINE}	Line Regulation	$I_{OUT} = 10mA,$ $V_{OUT} + 1.5V < V_{IN} < 12V,$ $T_J = 25^\circ C$		0.2	0.5	%
V_{LOAD}	Load Regulation	$V_{IN} = 3V, 10mA < I_{OUT} < 5A,$ $T_J = 25^\circ C$ (Note 1,2), ADJ Version			1	%
		$V_{IN} = 3V, 10mA < I_{OUT} < 5A,$ $T_J = 25^\circ C$ (Note 1,2), $V_{OUT} = 1.5V$ Fixed Version		12	15	mV
		$V_{IN} = 3.3V, 10mA < I_{OUT} < 5A,$ $T_J = 25^\circ C$ (Note 1,2), $V_{OUT} = 1.8V$ Fixed Version		15	18	mV
		$V_{IN} = 4V, 10mA < I_{OUT} < 5A,$ $T_J = 25^\circ C$ (Note 1,2), $V_{OUT} = 2.5V$ Fixed Version		20	25	mV
		$V_{IN} = 5V, 10mA < I_{OUT} < 5A,$ $T_J = 25^\circ C$ (Note 1,2), $V_{OUT} = 3.3V$ Fixed Version		26	33	mV



5A Low Dropout Linear Regulator

		$V_{IN}=6.5V, 10mA < I_{OUT} < 5A,$ $T_J=25^{\circ}C$ (Note 1,2), $V_{OUT}=5V$ Fixed Version		40	50	mV
$\square \Delta V_o$	Dropout Voltage	$I_{OUT}=5.0A$ ($V_{OUT}=1\% V_{OUT}$)		1.3	1.5	V
I_L	Current Limit	$V_{IN}-V_{OUT}=3V$	5.1			A
I_o	Minimum Load Current			5	10	mA
	Temperature Stability	$I_{OUT}=10mA$		0.5		%
θ_{JA}	Thermal Resistance Junction-to-Ambient (No heat sink ;No air flow)	TO-252 TO-263 TO-220		98 83 83		$^{\circ}C/W$
	Thermal Resistance Junction-to-Ambient (Note 3)	TO-252 TO-263 TO-220		55 45 45		
θ_{JC}	Thermal Resistance	TO-252: Control Circuitry/Power Transistor		10		$^{\circ}C/W$
	Junction-to-Case	TO-263: Control Circuitry/Power Transistor		0.65/2.7		
	Junction-to-Case	TO-220: Control Circuitry/Power Transistor		0.65/2.7		

Note 1: See thermal regulation specifications for changes in output voltage due to heating effects.

Line and load regulation are measured at a constant junction temperature by low duty cycle pulse testing. Load regulation is measured at the output lead = 1/18" from the package.







Note 2: Line and load regulation are guaranteed up to the maximum power dissipation of 15W.

Power dissipation is determined by the difference between input and output and the output current. Guaranteed maximum power dissipation will not be available over the full input/output range.

Note 3: Output is connected to the multi-layer PCB copper area 10mm*5.5mm separately. If you need large PD or lower T_c and T_j , please connect to the large copper area $\gg 10mm*5.5mm$ (like 10mm*10mm).



Typical Performance Characteristics

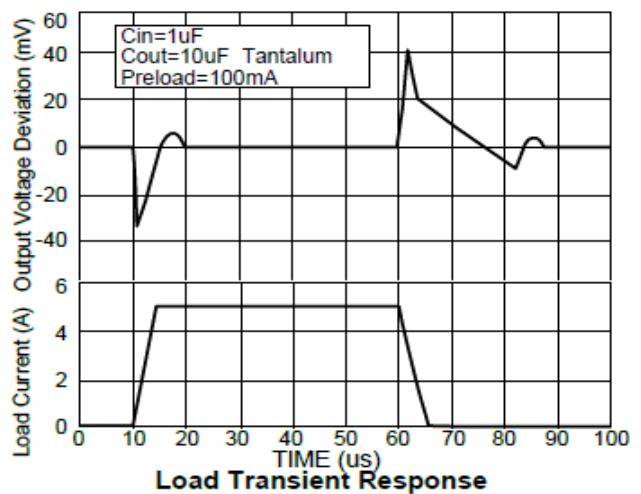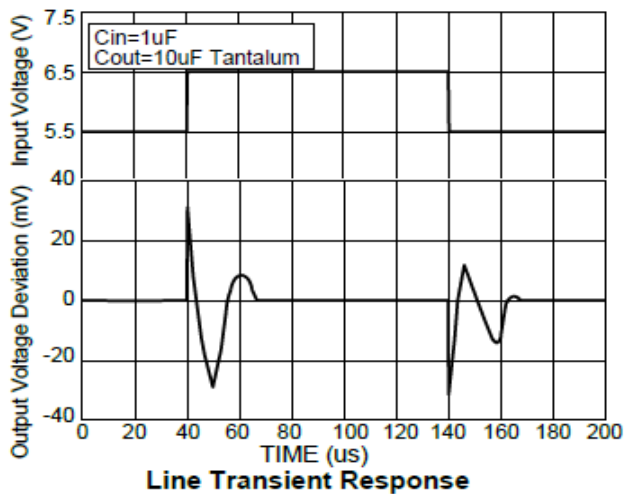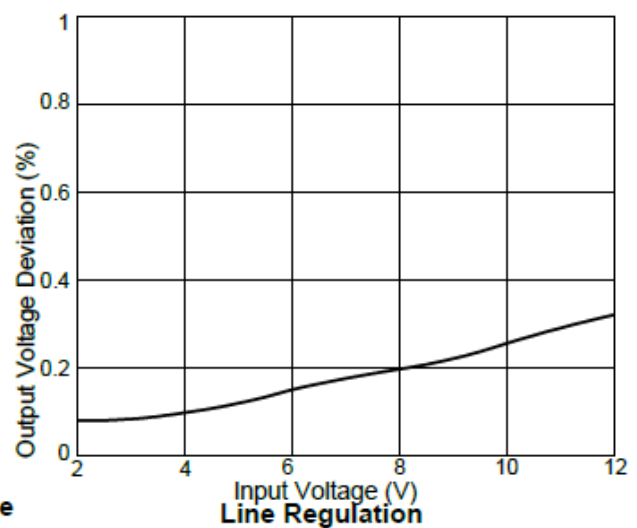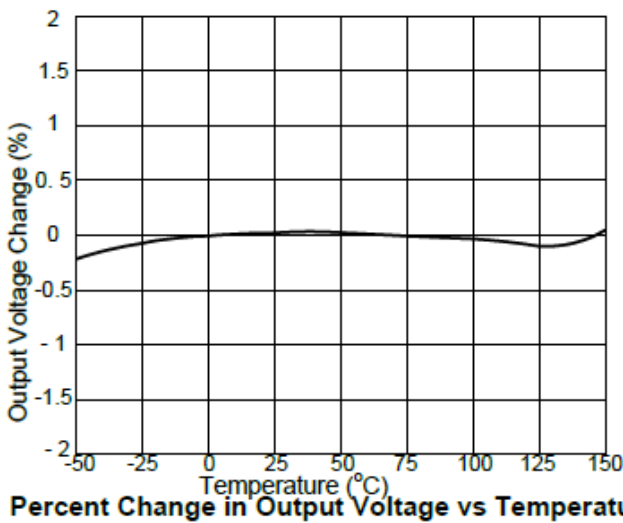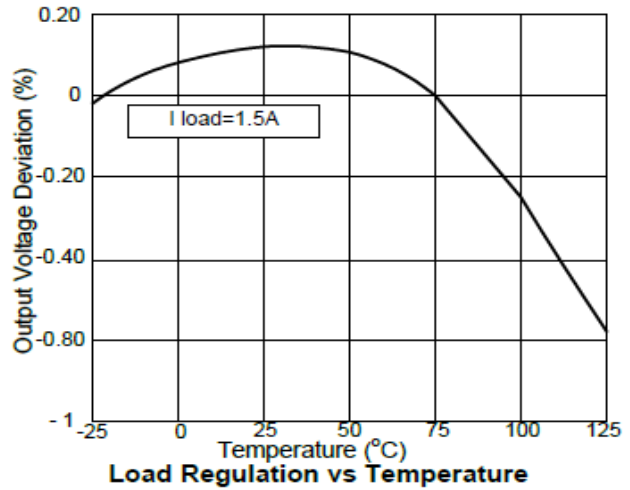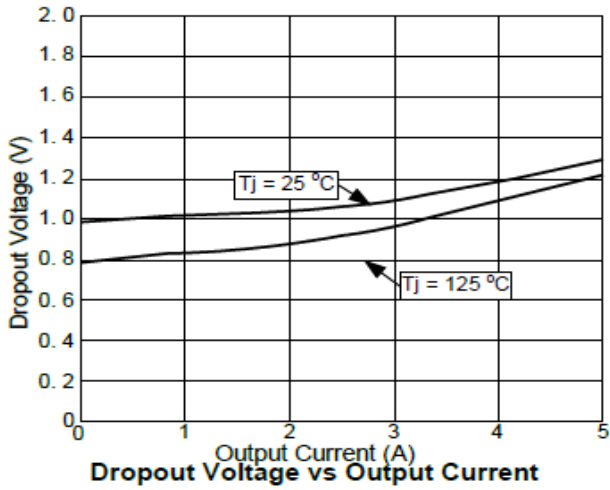

Applications Information

Introduction


The SE1084 adjustable Low Dropout (LDO) regulator is a 3 terminal device that can easily be programmed with the addition of two external resistors to any voltages within the range of 1.25V to $V_{IN}-1.5V$. The SE1084 only needs 1.5V differential between V_{IN} and V_{OUT} to maintain output regulation. In addition, the output voltage tolerances are also extremely tight and they include the transient response as part of the specification. For example, Intel VRE specification calls for a total of +/-100mV including initial tolerance, load regulation and 0 to 5.0A load step.

The SE1084 is specifically designed to meet the fast current transient needs as well as providing an accurate initial voltage, reducing the overall system cost with the need for fewer output capacitors.

Output Voltage Setting

The SE1084 can be programmed to any voltages in the range of 1.25V to $V_{IN}-1.5V$ with the addition of R1 and R2 external resistors according to the following formula:

$V_{OUT} = V_{REF} (1 + R2/R1) + I_{adj} * R2$, where $V_{REF} = 1.25$ typically, $I_{adj} = 50\mu A$ typically R1 and R2 as shown at below

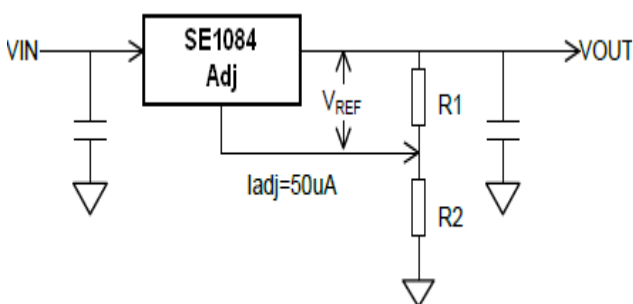

The SE1084 keeps a constant 1.25V between the output pin and the adjust pin. By placing a resistor R1 across these two pins a constant current flows through R1, adding to the I_{adj} current and into the R2 resistor producing a voltage equal to the $(1.25/R1)*R2 + I_{adj}*R2$ which will be added to the 1.25V to set the output voltage. This is summarized in the above equation. Since the minimum load current requirement of the SE1084 is 10mA, R1 is typically selected to be 121Ω resistor so that it automatically satisfies the minimum current requirement. Notice that since I_{adj} is typically in the range of 50uA it only adds a small error to the output voltage and should only be considered when a very precise output voltage setting is required. For example, in a typical 3.3V application where $R1=121\Omega$ and $R2=200\Omega$ the error due to I_{adj} is only 0.3% of the nominal set point.

Load Regulation

Since the SE1084 is only a 3 terminal device, it is not possible to provide true remote sensing of the output voltage at the load. The best load regulation is achieved when the bottom side of R2 is connected to the load and the top-side of R1 resistor is connected directly to the case or the V_{OUT} pin of the regulator and not to the load. It is important to note that for high current applications, this can re-present a significant percentage of the overall load regulation and one must keep the path from the regulator to the load as short as possible to minimize this effect.

Stability

The SE1084 requires the use of an output capacitor as part of the frequency compensation in order to make the regulator stable. For most applications a minimum of 100uF aluminum electrolytic capacitor insures both stability and good transient response.

Thermal Design

The SE1084 incorporates an internal thermal shutdown that protects the device when the junction temperature exceeds the maximum allowable junction temperature. Although this device can operate with junction temperatures in the range of 150°C, it is recommended that the selected heat sink be chosen such that during maximum continuous load operation the junction temperature is kept below the temperature.


Layout Consideration

The output capacitors must be located as close to the V_{OUT} terminal of the device as possible. It is recommended to use a section of a layer of the PC board as a plane to connect the V_{OUT} pin to the output capacitors to prevent any high frequency oscillation that may result due to excessive trace inductance.



Outline Drawing For SE1084

(1) TO252

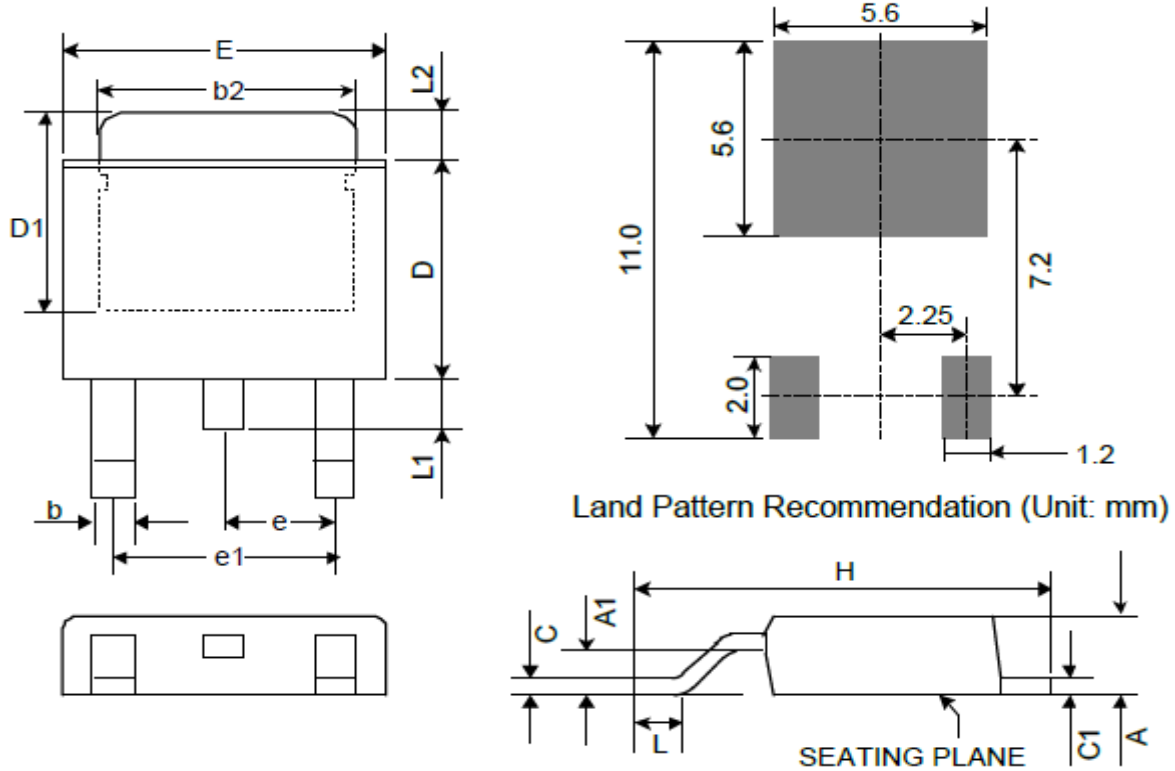


Symbol	Dimensions in Millimeters			Dimensions in Inches		
	Min.	Nom.	Max.	Min.	Nom.	Max.
A	2.18	2.29	2.39	0.086	0.09	0.094
A1	-	-	0.13	-	-	0.005
b	0.51	0.71	0.89	0.02	0.028	0.035
b2	4.95	5.21	5.46	0.195	0.205	0.215
C	0.46	0.53	0.61	0.018	0.021	0.024
C1	0.46	0.53	0.58	0.018	0.021	0.023
D	5.33	5.46	6.22	0.21	0.215	0.245
D1	4.57	-	-	0.18	-	-
E	6.35	6.55	6.73	0.25	0.258	0.265
e	2.29 BSC			0.090 BSC.		
e1	4.58 BSC			0.180 BSC.		
H	9.4	9.7	10.4	0.37	0.382	0.41
L	1.4	1.6	1.78	0.055	0.063	0.07
L1	-	-	1.02	-	-	0.04
L2	1.52	1.78	2.03	0.06	0.07	0.08

Mold flash shall not exceed 0.005inch per side
JEDEC outline: TO-252



(2) TO263

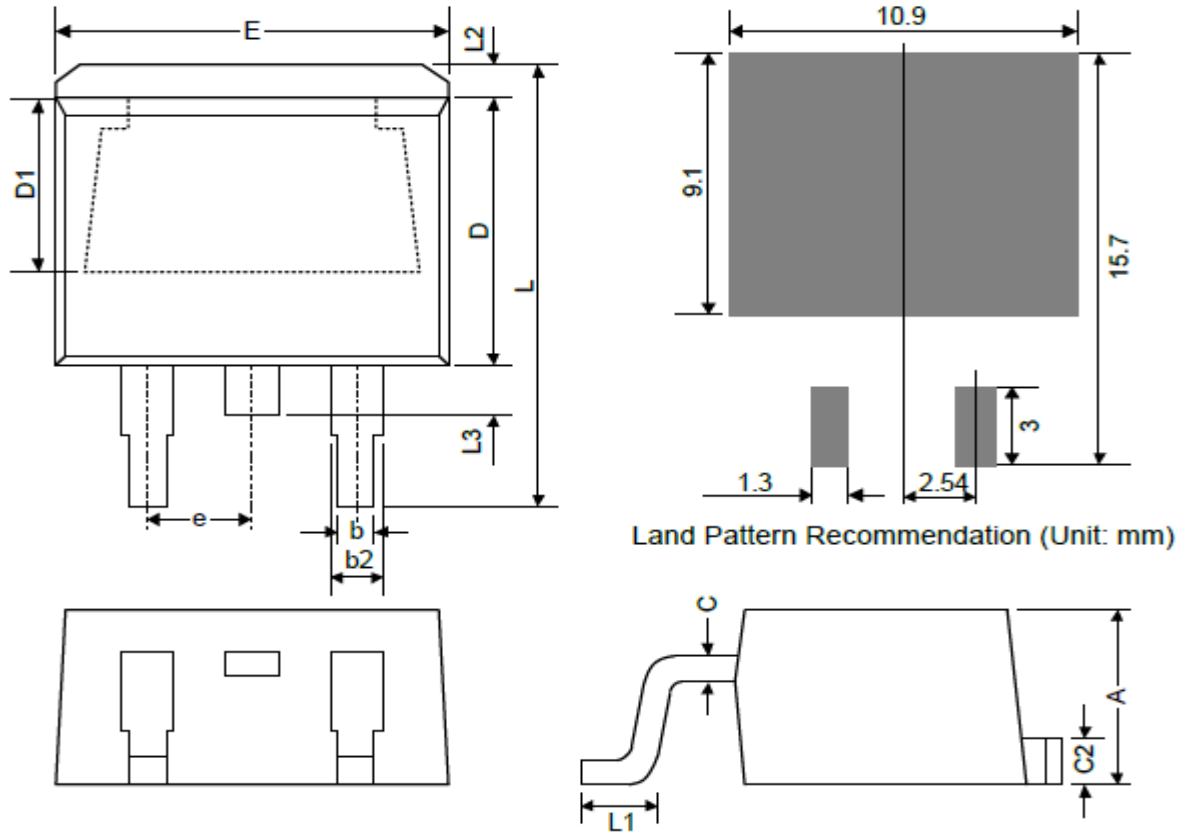


Symbol	Dimensions in Millimeters			Dimensions in Inches		
	Min.	Nom.	Max.	Min.	Nom.	Max.
A	4.06	4.45	4.83	0.16	0.175	0.19
b	0.51	0.76	0.99	0.02	0.03	0.039
b2	1.14	1.47	1.78	0.045	0.058	0.07
C	0.38	0.56	0.74	0.015	0.022	0.029
C2	1.14	1.4	1.65	0.045	0.055	0.065
D	8.38	9.02	9.65	0.33	0.355	0.38
D1	5.08	-	-	0.2	-	-
E	9.65	10.2	10.7	0.38	0.4	0.42
e	2.54 BSC			0.1 BSC		
L	14.6	15.2	15.9	0.575	0.6	0.625
L1	1.78	2.29	2.79	0.07	0.09	0.11
L2	-	-	1.68	-	-	0.066
L3	-	-	1.78	-	-	0.07

Mold flash shall not exceed 0.005inch per side
JEDEC outline: TO-263 AB



(3) TO220

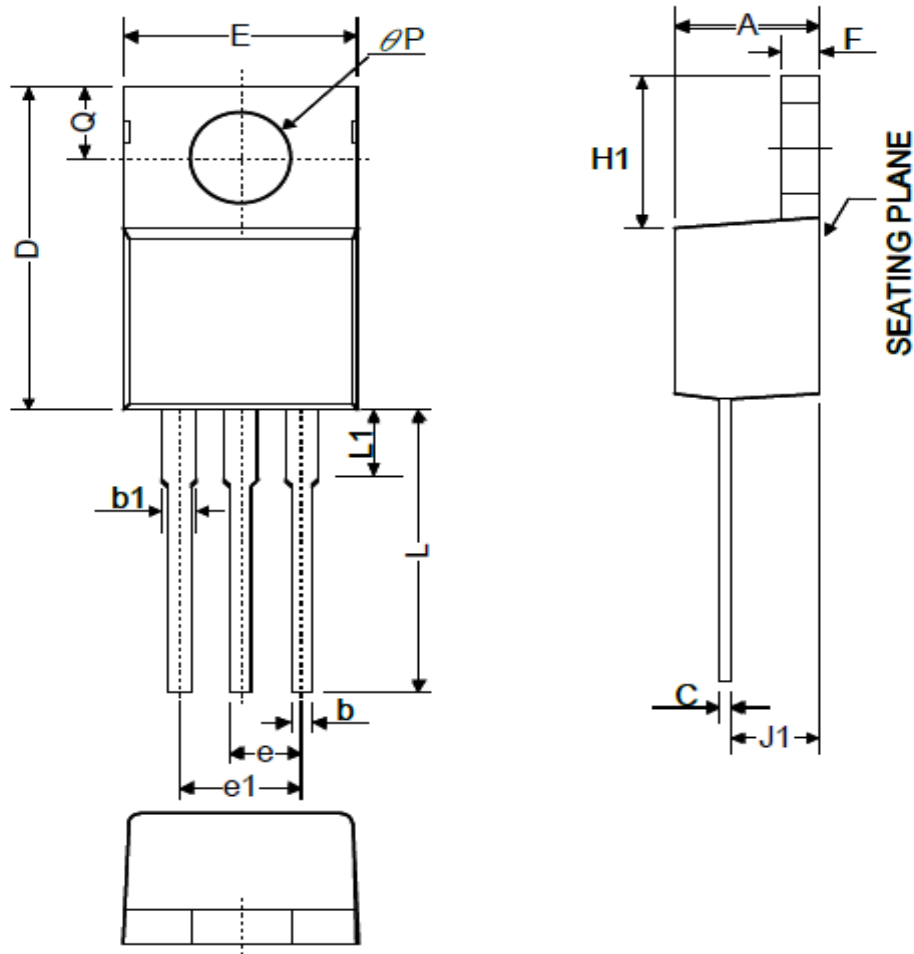

Symbol	Dimensions in Millimeters			Dimensions in Inches		
	Min.	Nom.	Max.	Min.	Nom.	Max.
A	3.55	4.19	4.83	0.14	0.165	0.19
b1	1.14	1.45	1.78	0.045	0.057	0.07
b	0.38	0.69	1.02	0.015	0.027	0.04
C	0.36	0.48	0.61	0.014	0.019	0.024
D	14.2	15.4	16.5	0.56	0.605	0.65
E	9.7	10.2	10.7	0.38	0.4	0.42
e	2.54BSC			0.1BSC		
e1	5.08BSC			0.2BSC		
F	0.51	0.95	1.397	0.02	0.038	0.055
H1	5.84	6.35	6.86	0.23	0.25	0.27
J1	2.03	2.48	2.92	0.08	0.098	0.115
L	12.7	13.7	14.73	0.5	0.54	0.58
L1			6.35			0.25
θP	3.53	3.81	4.09	0.139	0.15	0.161
Q	2.54	2.98	3.43	0.1	0.118	0.135

Mold flash shall not exceed 0.005inch per side
JEDEC outline: TO-220 AB



SEAWARD
ELECTRONICS

SE1084 5A Low Dropout Linear Regulator

联系方式:

北京思旺电子有限公司-中国总部

地址: 中国北京市海淀区信息路 22 号上地科技综合楼 B 座二层

邮编: 100085

电话:010-82895700/1/5

传真:010-82895706

Seaward Electronics Corporation – 台湾办事处

2F, #181, Sec. 3, Minquan East Rd,

Taipei, Taiwan R.O.C

电话: 886-2-2712-0307

传真: 886-2-2712-0191

Seaward Electronics Incorporated – 北美办事处

1512 Centre Pointe Dr.

Milpitas, CA95035, USA

电话: 1-408-821-6600